

INSTALLATION INSTRUCTIONS TORNADO ELECTRIC FAN KIT PART # 16610, 16612 & 16614

Please read these instructions completely before beginning installation

KIT CONTENTS

- DESCRIPTION QTY. Electric Fan Assembly 1
- 4 Mounting Rod
- Mounting Clip 4
- 4
 - 1x1 Foam Pad

TOOLS NEEDED

Standard Screw Driver 12V Test Light Wire Stripper Crimping Tool

Dyke Pliers

IMPORTANT

This fan assembly is designed for both PUSHER and PULLER applications.

To change airflow direction from the factory setting, you MUST follow the directions below or performance will be compromised. (See Diagram #1)

PRE-INSTALLATION

Important: Tornado Electric Fans come from the factory with a product label installed on one end of the fan shroud. Before installation check the product label to confirm airflow direction and positive electric fan lead color. Airflow direction will be shown with an arrow.

This fan is factory setup for PULLER applications Changing airflow direction

To change the airflow direction from the factory setting:

- Remove the Nut or Clip that holds the electric fan blade onto the motor 1. shaft.
- 2. Carefully remove the fan blade from the motor shaft.

Note: This is an interference fit and requires some effort.

- Flip the fan blade upside down and reinstall onto the motor shaft. Make 3. sure the roll pin on the motor shaft is aligned with the slot on the fan blade.
- Reinstall nut or clip on motor shaft. 4.

Important: For Puller applications use the referenced wire colors stated on the Product Label. For Pusher applications the two wires MUST be reversed to change airflow direction.


ELECTRIC FAN MOUNTING

Note: This Electric Fan Assembly requires 4 mounting positions. (See Diagram #2)

- Position the electric fan against the radiator in the desired location. 1.
- Take the Plastic Rods provided and install through the mounting holes on the shroud pushing them slowly into and through 2. the radiator core.

Caution: Do not use excessive force when pushing Plastic Rods through radiator core. Excessive force could cause Damage to the radiator fins and/or core. Plastic Rods should not be inserted thru both the radiator and the condenser cores.

- Take the 1 x 1 Foam pads provided and install them 3. onto the Plastic Rods now protruding through the radiator core.
- Take the Plastic Clips provided, making sure they are in 4. the correct direction (Derale writing out) install onto the Plastic Rods and cinch them until the 1 x 1 Foam Pads are compressed.
- 5. Cut off the excess Plastic Rod.

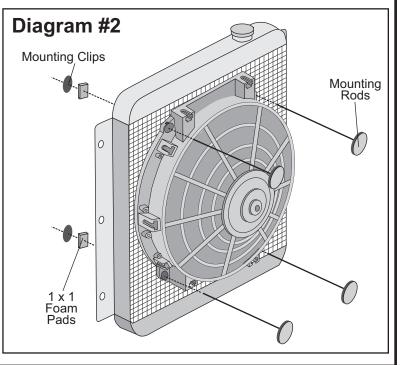

(Continues on Page 2)

Derale Performance, Los Angeles, CA • 800.421.6288 • www.derale.com

